DENIZLI INSTALLATION INSTRUCTIONS



All information contained in this document was provided by the manufacturer of the components for this particular model. As a fabricator/distributor, Retractableawnings.com Inc. claims no liability with respect to these documents as we are not engineers and did not complete any of the information, engineering or calculations in this document.

All measurements in this document are metric. To convert from metric (meters, centimeters and millimeters) to imperial (feet and inches) visit this website:

http://www.onlineconversion.com/length_common.htm

IA = Interaxis between conveyor rafter bars

One Module

200 cm > 450 cm

Two Module


450 cm > 900 cm

Three Module


900 cm > 1300 cm


Installation bracket W=1A+160 mm STEPI Install wall brackets using suitable fixings for site requirements.Ensure all wall brackets are same level with each other and correct width apart to match the conveyor rafters on your system. Note : The tolerance value for " W1,W2,W3" is (+ 20 mm , -20 mm) Installation bracket W2=1A2+120 mm N W1=1A1+120 mm Installation bracket W3=1A3+120 mm W2=1A2+80 mm W1=1A1+120 mm 120mm 91.4mm 45mm 133.5mm 133.5mm


17mm

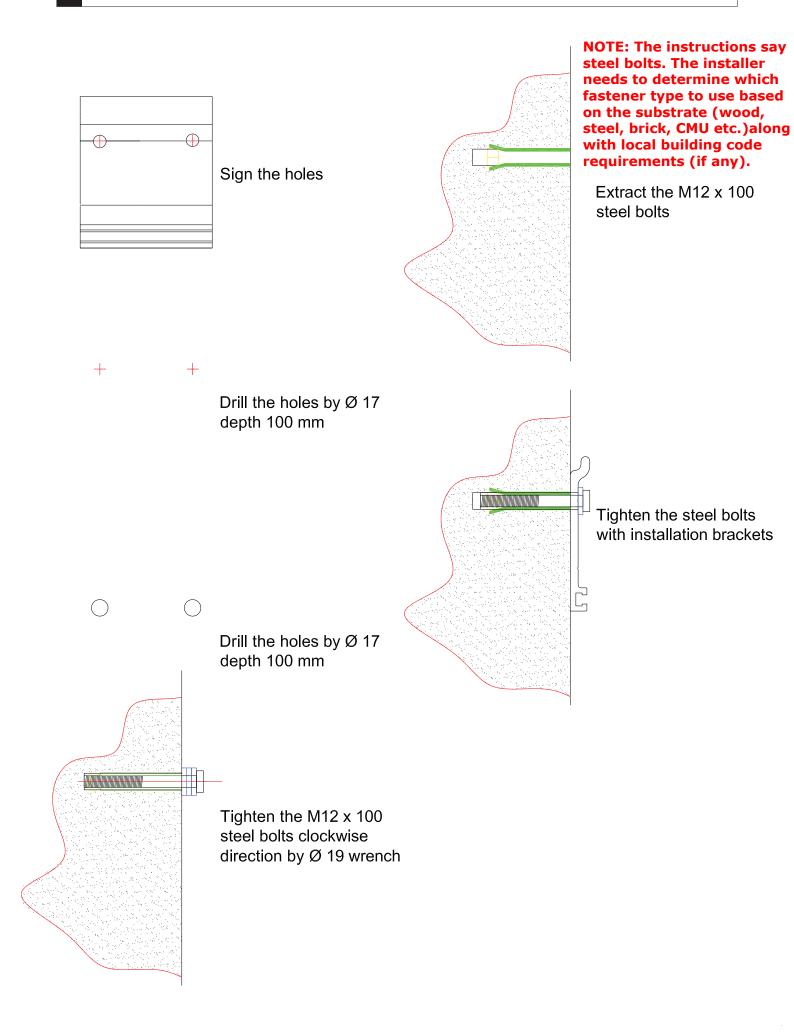



STEP II
Establishment of front columns & front rafter bar (gutter)

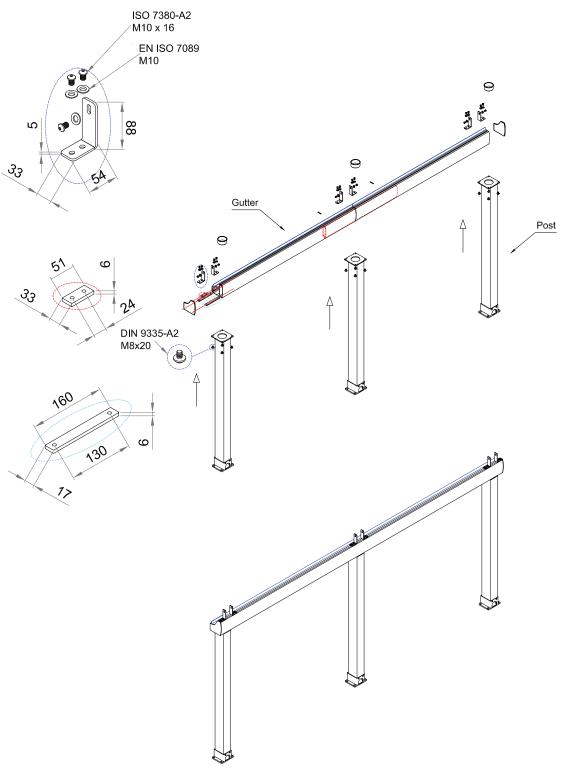


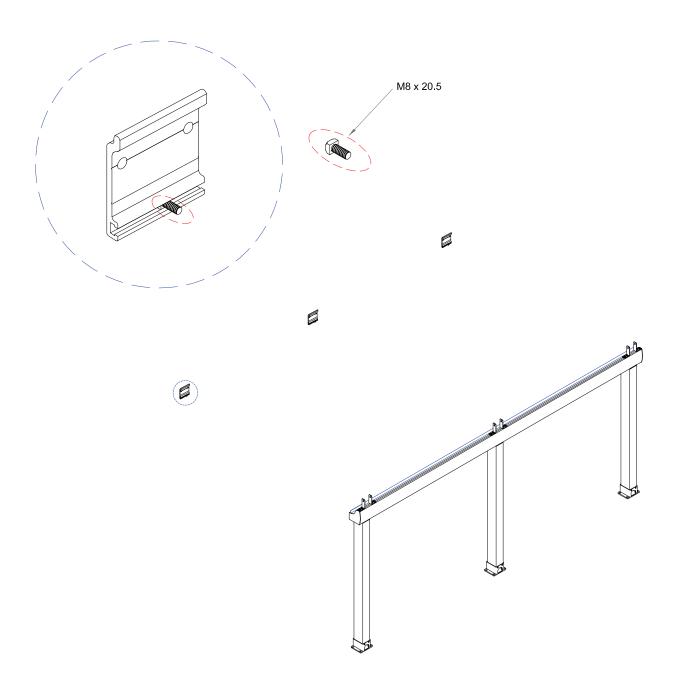


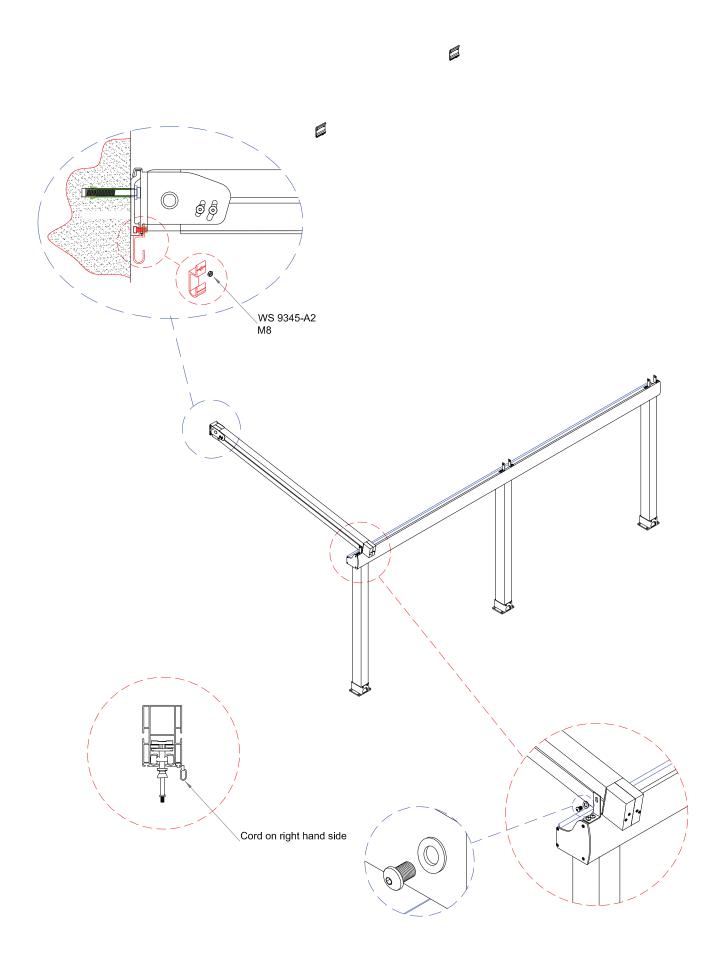


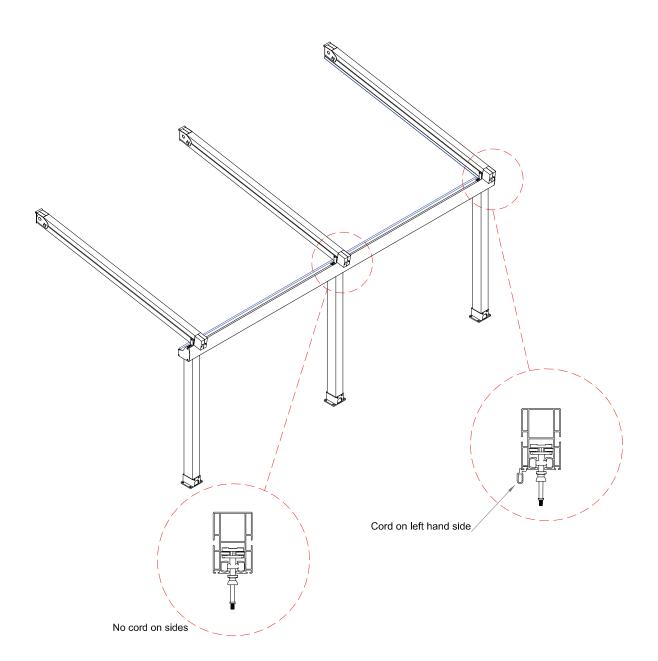

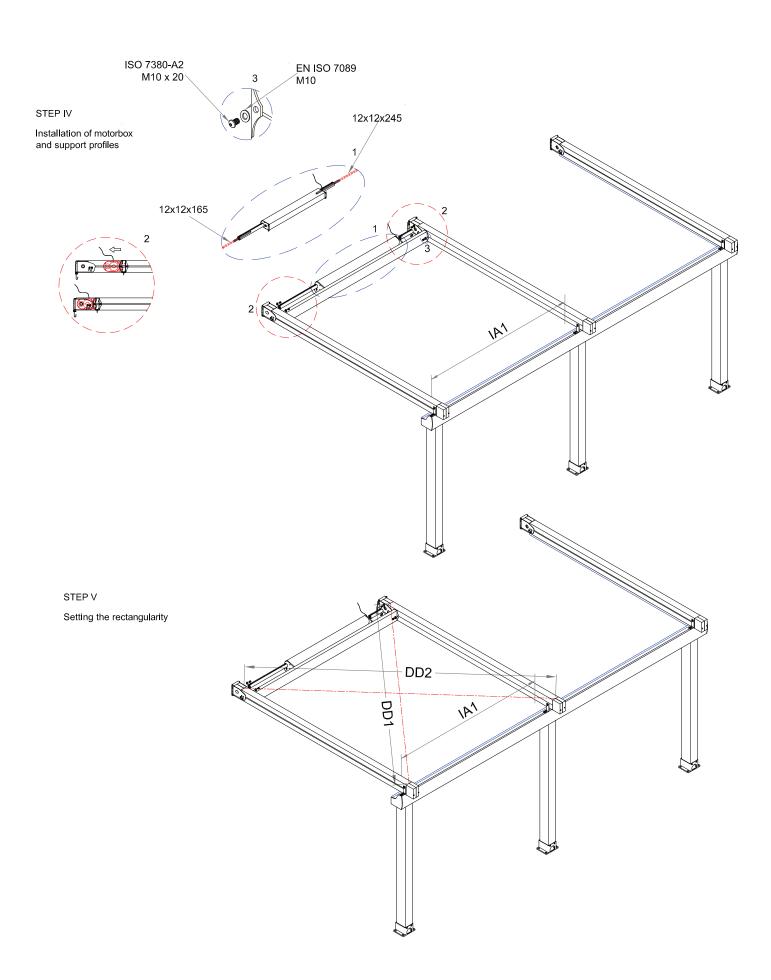

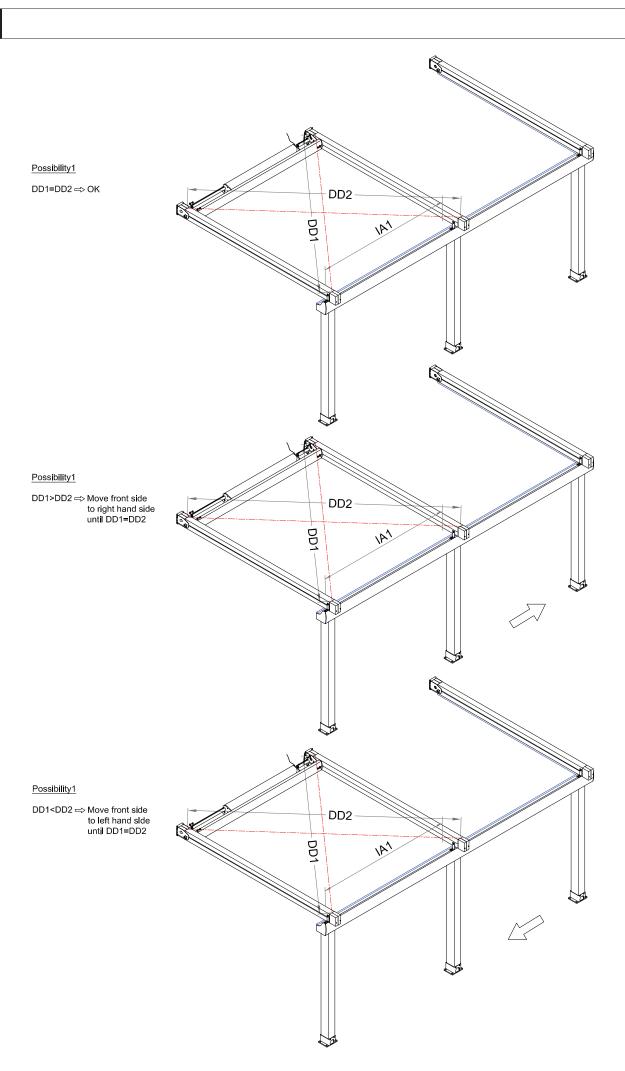


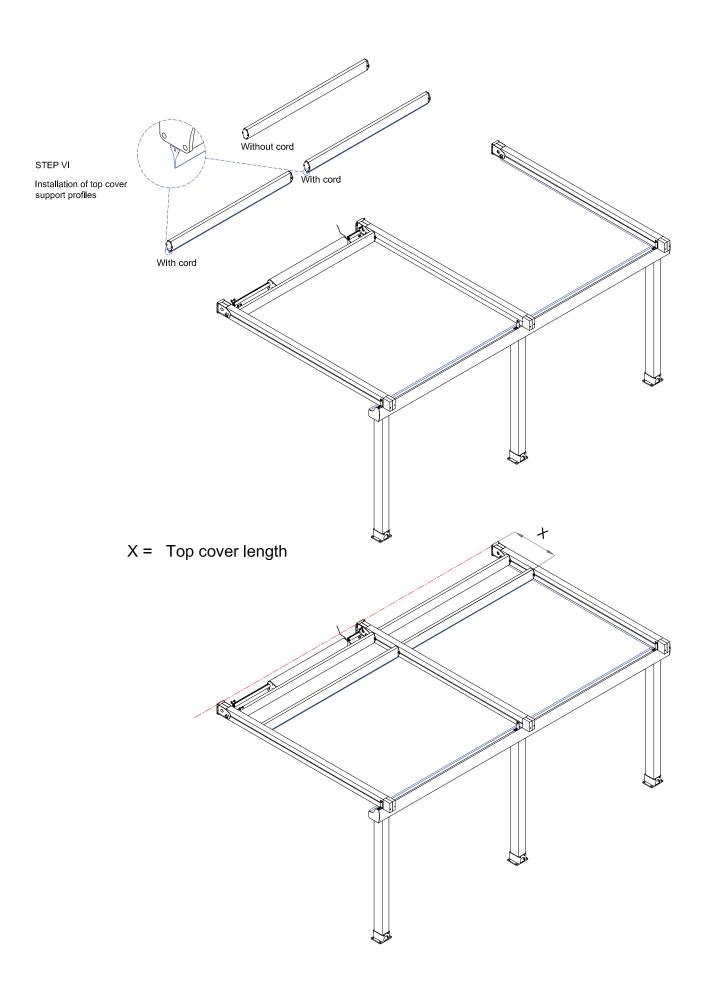


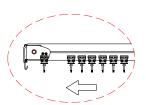



STEP VII

Installation of square pins and transmission bar

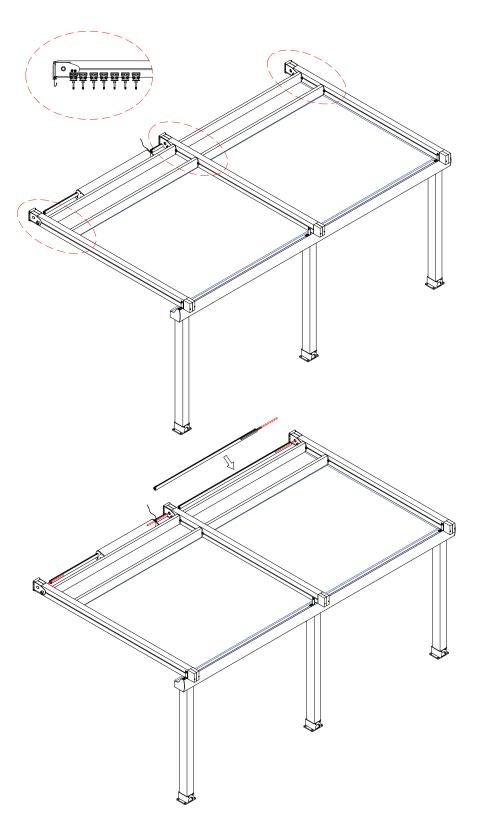

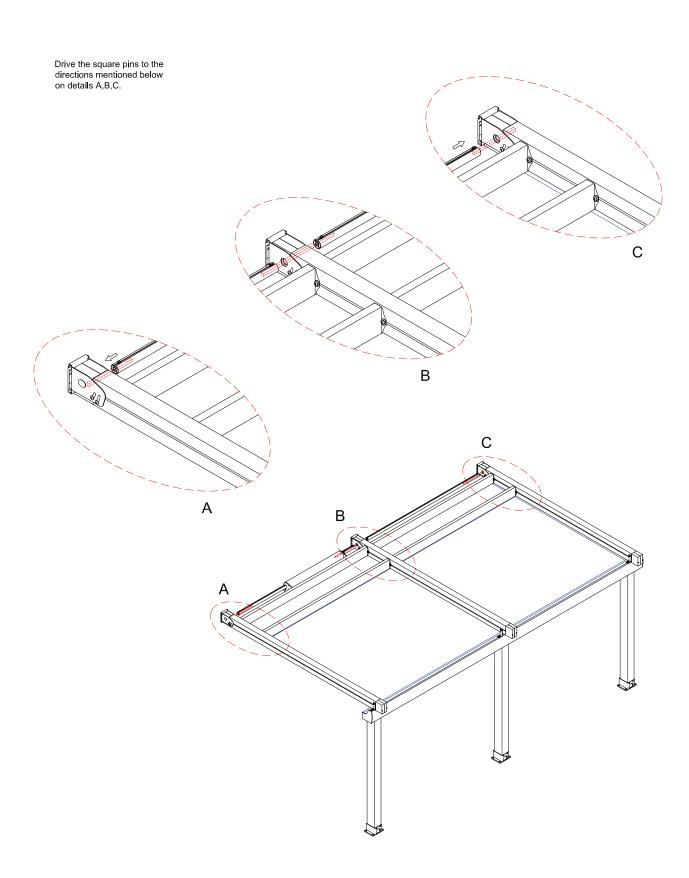


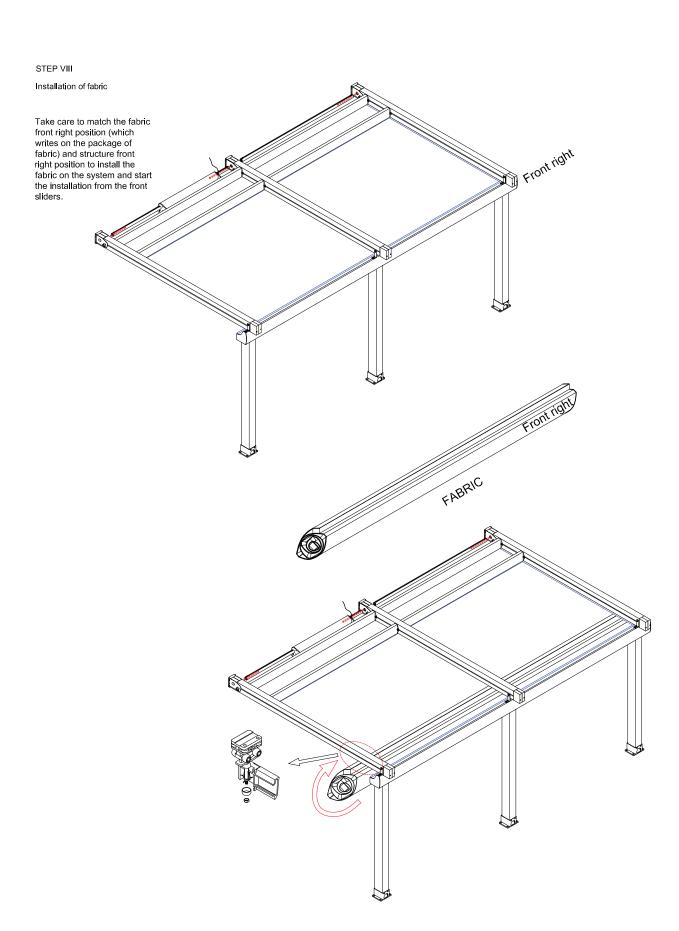

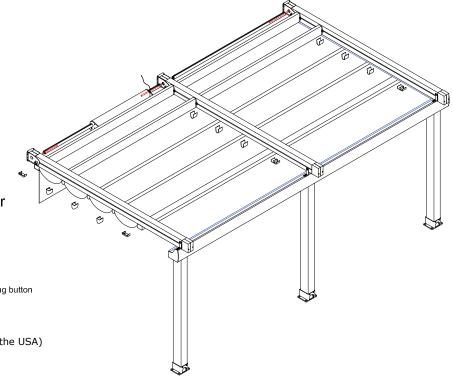

STEP IX

Programming RTS Somfy motor

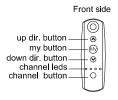

Back side

Step1:

Connect the motorbox to 220 AC power (110v in the USA)

- -Blue : Notr -Brown:Phase
- -Green-Yellow:Ground

Step2:



Check the channel for programming motor.Pres the channel button to select the channel 1, make the channel 1 led light flashing.

Step3:



Press the up and down button at same instance motor will give a click.(this means motor and remote control unit is introduced to each other.

Step4:



Press the up button to check the direction of movement. If the fabric moves to up direction go on to step 6, if no go on to step 5.

Step5:



Press the My button until the motorbox gives a click. The direction is reversed

Step6:



Move the fabric to back limit position that the fabric is totally gathered under the front top cover support profile.

Step7:



Press the My button & Down Dir. Button at the same instance for once the fabric will start to move down direction. And stop the movement with My button apprx. 5 cm before the front en limit.

Step8:



Press the down dir. button will small time intervals until the fabric is fully tensioned.

Step9:



Press the My button & Up Dir. Button at the same instance for once the fabric will start to move up direction. And will stop itself at back limit position.

Step10:




Stay pressing the My button until the motor will give click movement.

Step11:



Press the programming button once. The programming is finished.

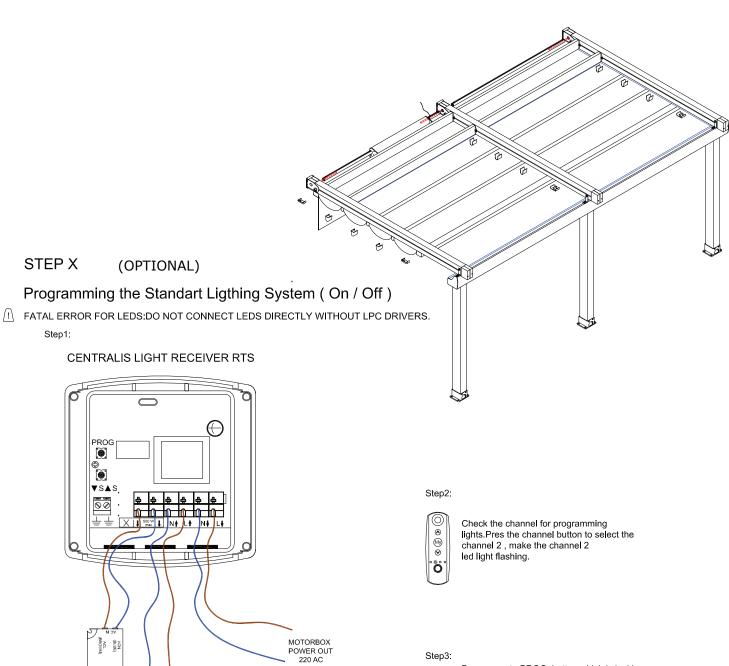

Step3:


L (PHASE)

N (NOTR)


Press once to PROG. button which is inside the centralis light receiver unit.


Step4:


Press the programming button once. The programming is finished.

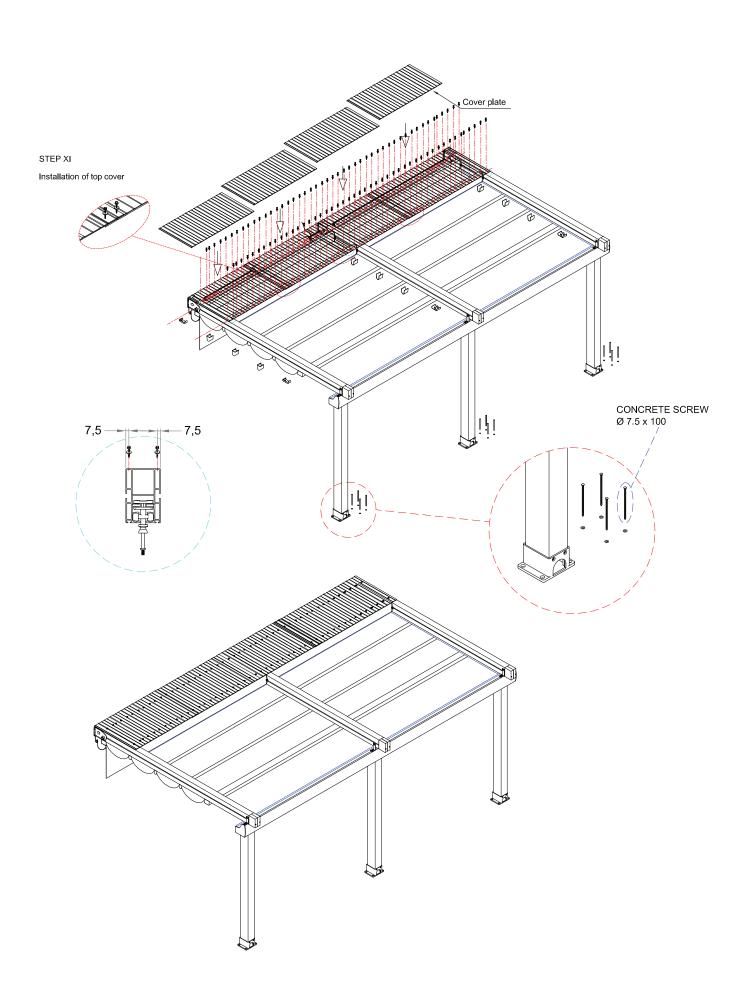


SIDE RAFTER BAR INSTALLATION (OPTIONAL)

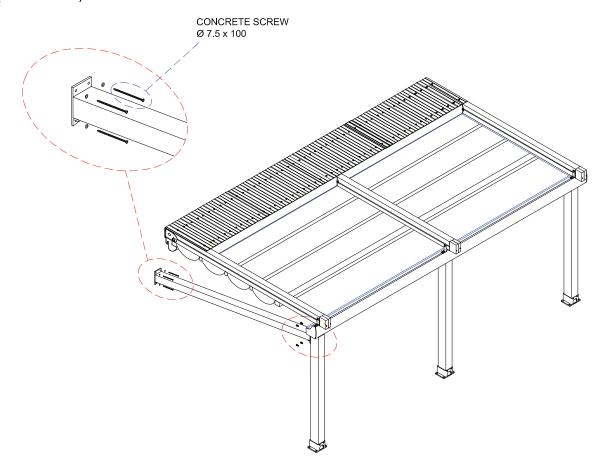

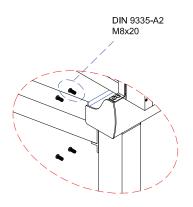

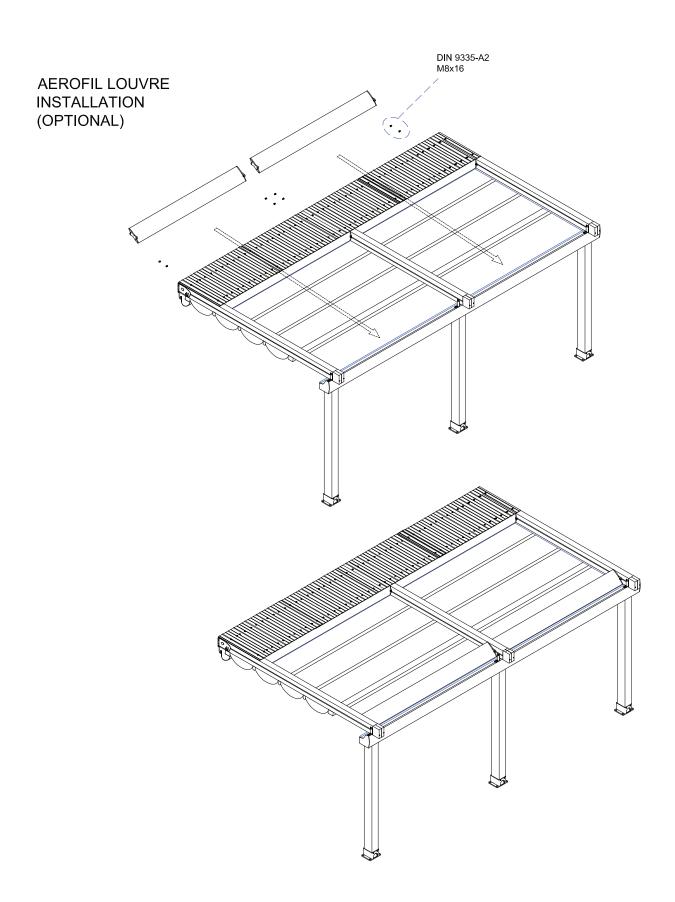

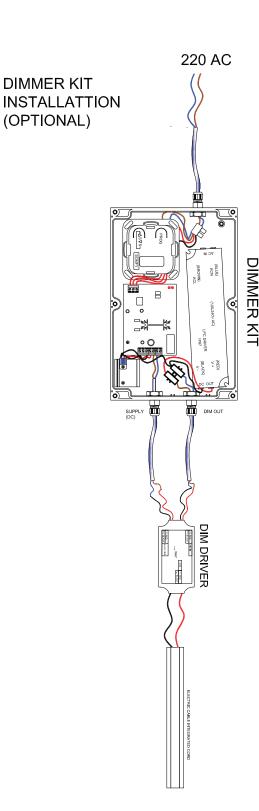

Programming Dimmer Kit

Step1:

The Dimmer Kit is already Programmed on Channel II on Remote Control if no;

Step2:



Check the channel for programming lights. Pres the channel button to select the channel 2 , make the channel 2 led light flashing.

Step3:


Press once to PROG. button which is inside the dimmer kit.

Step4:



Press the programming button once. The programming is finished.

Double Motor Connection & Programming (Optional)

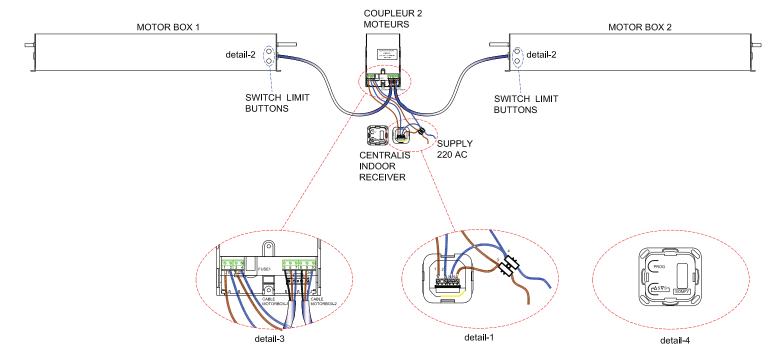

Programming Double Motor Kit;

Step1:

For start be sure that motorboxes are installed like that the cable outs from motorboxes are looking to eachother.And the 220 inputs are connected together from coupleur 2 moteurs and centralis inddor.Detail-1

Step2:

The white&yellow buttons on motorboxes 1&2 must be pushed down position (detail-2)

Step3

All programming will be done from motorbox 1 (is the motorbox which is connected to slots 5-6-7) (detail-3)

Step4:

From centralis indoor receiver press "S" button (detail-4) motor will start moving the system and when the system is reached to limit point push up the yellow or white button from motorbox1.

Step5:

Push the other "S" for the other side limit and when the system reaches the limit, bush up the other button yellow or white from motorbox1.

Step6:

At the end to match the remote control with centralis indoor, press the prog button on thecentralis indoor receiver and press once on the remote control which is in the back side of the remote control.

Note:To change a limit push down the yellow or white button on motorbox-1 again and move the system to new limit point and push up the button again.



All weather protection systems!

RETRACTABLE AWNINGS.COM

In the USA/Canada: (866)Get Awnings

or (866) 438-2964

Outside the USA/Canada: (305) 628-2424

info@retractableawnings.com